


Aufbauanleitung Assembly Instructions

L-shaped Angle of Avoidance

Model Number:

HM-LP01

Item Number #80953

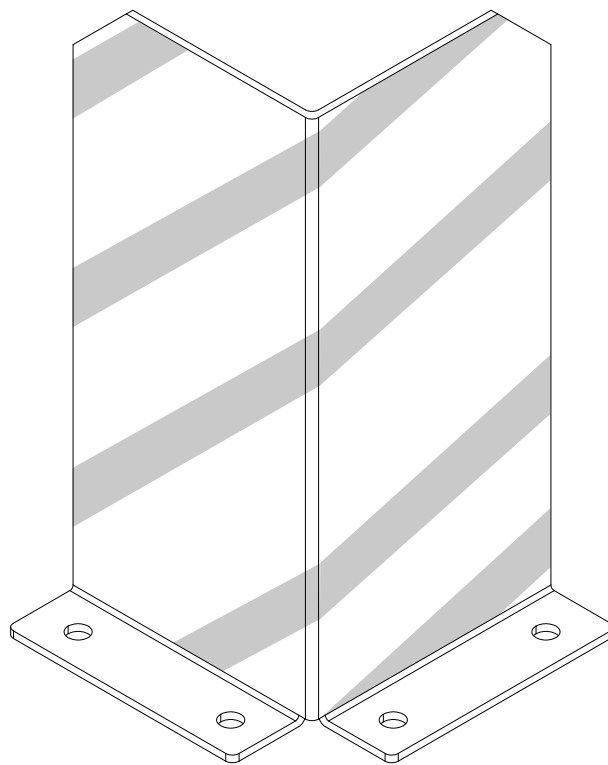

Mendler Vertriebs-GmbH


Industriestr. 60

73642 Welzheim

fragen@heute-wohnen.de


www.heute-wohnen.de

A

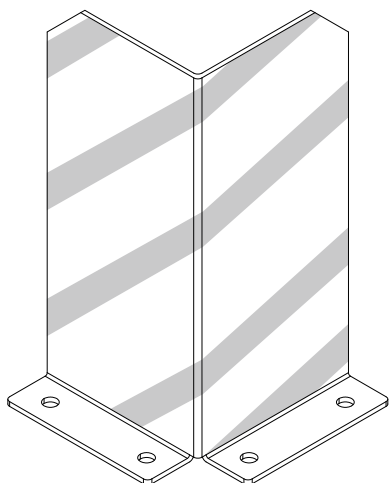

x1


B

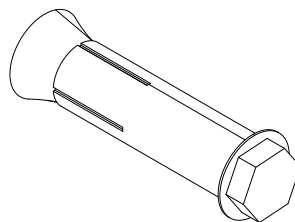


M12*100mm

x4

01

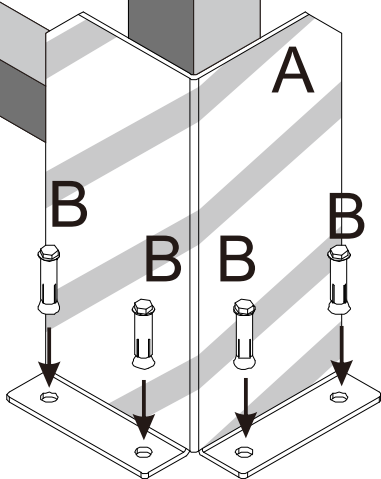

02

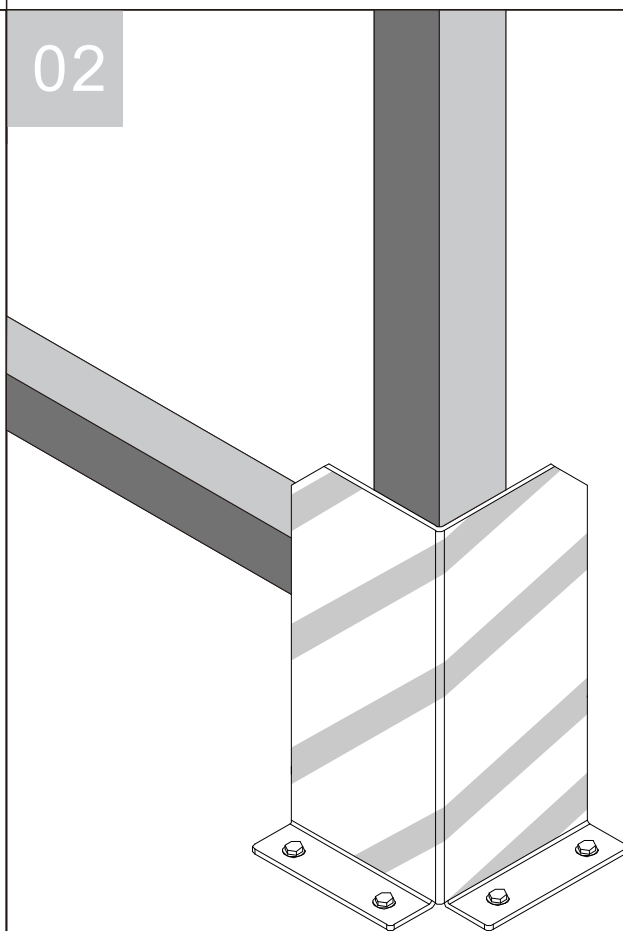

Betonbohrer notwendig
Concrete drill necessary
Foret à béton nécessaire
Trapano per calcestruzzo necessario
Taladro de hormigón necesario