


Guide to Assembly & Usage

ASSEMBLY INSTRUCTIONS

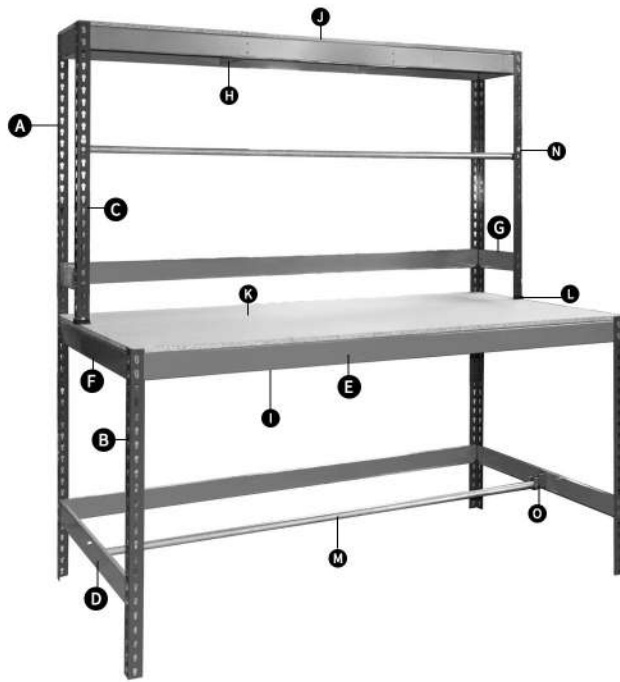

HELP LINE
01977 555007

COMPONENT CHECK LIST

Component	Quantity
A Upright high	2
B Upright high	2
C Upright high	2
D pre drilled beam	2
E long beam	5
F side beam	2
G side beam	4
H Centre Support (Varies according to depth)	1
I Centre Support (Varies according to depth)	6
J Chipboard for Top Shelves	1
K Chipboard for Worktop	1
L Plastic Protective Foot	10
M axle bar	2
N Pendant of top axle	2
O Pendant of lower axle + 2 x screws	2



Information

if in doubt contact the supplier



Please read these instructions thoroughly before commencing assembly.



Inspect all packages for damage and check that all components have been supplied



Assembly should be undertaken by at least two people



Caution

During Assembly



Wear appropriate clothing - protective gloves and footwear are recommended



Dispose of packaging materials responsibly



Make sure the floor is level



Allow adequate working space and be aware of others working around you



Take care when handling heavy items particularly when lifting or stretching



Warning

Rules for safe use of shelving



Not suitable for use in damp or wet environments.



ENSURE THAT THE MAXIMUM LOAD CARRYING CAPACITIES ARE NOT EXCEEDED



Shelves must be loaded evenly, and load heavier items on the bottom shelves




Never climb or stand on the shelves.

TOOLS REQUIRED



RUBBER Mallet

ASSEMBLY INSTRUCTION

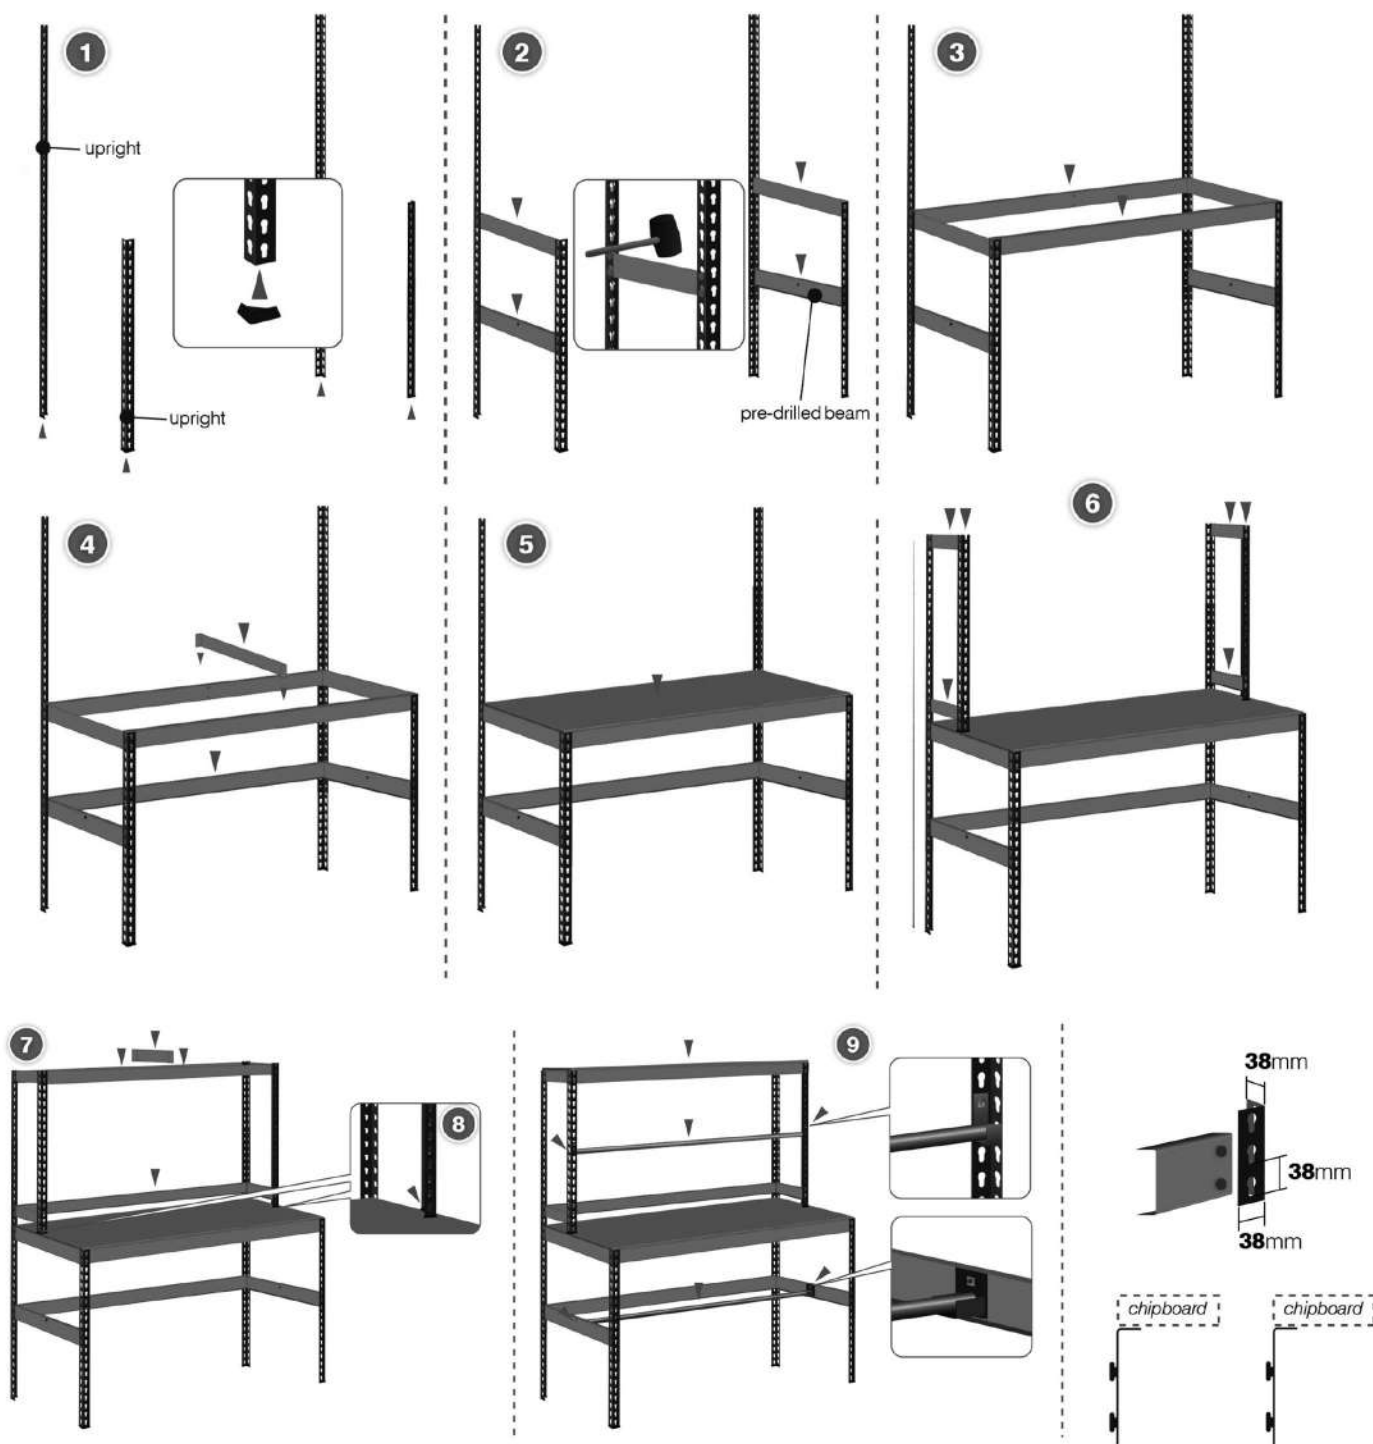

1. Attach plastic feet to all 8 uprights, the narrow part of each slot pointing downwards.

2. With another person holding the uprights, place the upright to the back and the to the front. Now tap the side beams in at the required positions for the worktop and the lower packing roll. (The lower packing roll beams to be installed upside down, these pre-drilled beams are to hold the packing roll brackets underneath the work surface.)

3. The face beam for the work top should be positioned in the top two holes of the upright.

4. Now insert the front to back deck support in the main work station level and fit the lower back beam.

5. Add the shelf to the work top level.

6. Now position the uprights on top of the work top ready to tap in the side beams, position side beams as necessary.

7. Install the top level face beams, then add the front to back deck support and fit the lower back support beam.

8. Screw the plastic feet of the uprights down to the worktop with the chrome screws provided.

9. Add the shelf to the top level. Install the galvanised upper bracket holders into the uprights using the nuts and bolts and insert packing rail. Then install the lower bracket holders into the pre-drilled beams with nuts and bolts and insert packing rail.

Tools Required

Rubber Mallet, Phillips Screwdriver



Safety Precaution



Two competent people wearing **safety gloves**, **safety shoes** and **protective eyewear** are recommended to undertake the assembly.