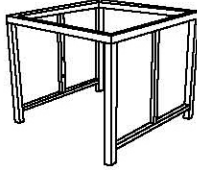
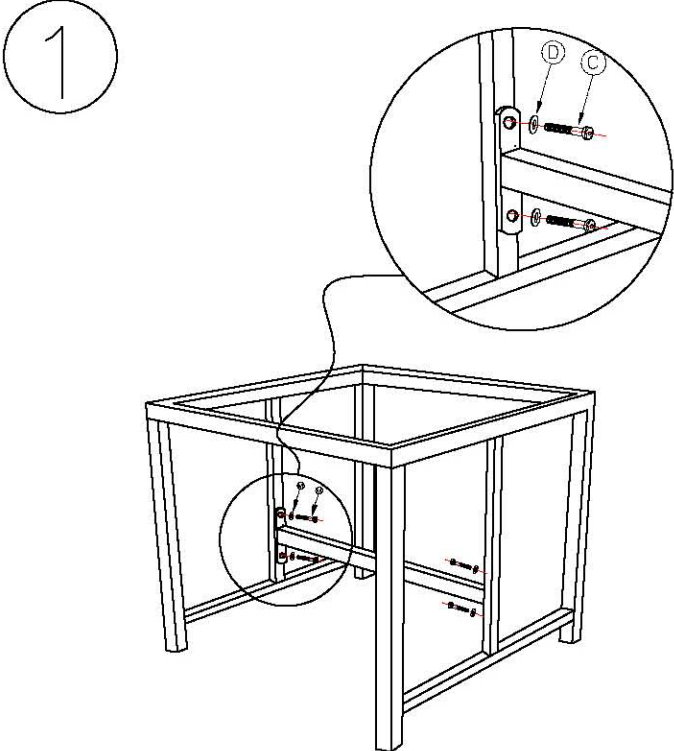



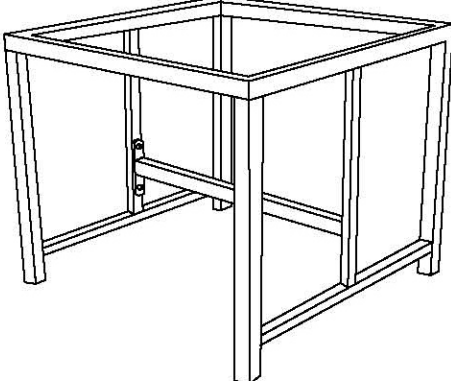



43255 + 43256 + 43257

43270 + 43271 + 43272

footrest			
A		4	<p>①</p> 
B		4	
C	 M6*20	16	
D	 M6*1.0	16	<p>②</p> 
E		1	

Do not tighten screws until fully assembled